

Semi-Automatic Partition Operation Specification

1. The red "Lock Key" and green "Unlock Key" are the control keys for the vertical and horizontal telescopic devices of the door panels. When the door panel is powered and the key indicator light is on, use one hand to gently push the door panel forward to ensure stable contact, and use the fingertip of the other hand to lightly press the red "Lock Key" or green "Unlock Key". Wait for the motor to complete the "lock" or "unlock" operation (judged by the motor's starting and stopping sound) before securing, assembling, or moving the retractable door panel. Do not press and hold the lock/unlock keys or use quick fingertip presses.
2. When assembling the last door panel next to the wall with horizontal telescopic capability, with the power on and the key indicator light on, lightly press the red "Lock Key" for operation. (If the telescopic panel is far from the wall, pressing once may not fully extend it; the system may automatically cut power, requiring you to press the red "Lock Key" again to ensure the telescopic panel reaches and presses against the wall.) When retracting and moving the door panel, similarly, lightly press the green "Unlock Key" to ensure the telescopic panel is fully retracted.
3. Additionally, if the power is interrupted midway, the above steps must be repeated.
4. Precautions: All operations using the "Lock Key" and "Unlock Key" must be performed while powered on; under normal power conditions, pressing the "Lock Key" or "Unlock Key" will cause the key indicator light to flash for 15 seconds before staying on steadily.
5. Notes: The illustrated key use is as follows:
The red "Lock Key" is used to fix and lock the door panel. It controls the vertical telescopic device inside the door panel. Press once to extend and secure the door panel.



The green "Unlock Key" is for moving and retracting the door panel. Press once to activate the retracting device inside the door, allowing the door panel to be moved and stored.

Operating Instructions for the Inner-Door:

When closing the glass inner-door, do not push hard on the lower part of the door leg. Excessive inward pushing of the lower door leg will cause the door leaf to jam.

If the door leaf gets jammed, do not force it closed. Gently push the door leg outward in reverse direction to release the jam.

For daily use, push and close the door gently. Avoid rough operation to ensure proper equipment performance.

Shanghai Karl Fold Intelligent Technology Co.,Ltd

Technical Department